



TESUCO

TECHNICAL SUPPLIES COMPANY

Regulators

QUALITY GAS EQUIPMENT

www.tesuco.com.au

Our name Tesuco® comes from
Technical Supplies Company.

We Thank You For Choosing Our Quality Gas Equipment

Beginning in 1988, Tesuco® has established itself as a specialist equipment supplier for all gas welding, heating and cutting applications. Tesuco® is proud to be 100% Australian owned and has been quality endorsed by SAI Global to the AS/NZS ISO 9001 Standard since 1995.

Tesuco® continues to introduce new and exciting products from the best Australian and overseas manufacturers. This booklet introduces you to our range of welding, heating and cutting equipment, available through our extensive distributor network both here and abroad.



Tesuco Pty Ltd

Head Office Unit 12, 110-120 Silverwater
Road, Silverwater NSW 2128

Hours Mon - Fri 8am - 5pm

Phone +61 2 9737 9937

Sales sales@tesuco.com.au

Orders orders@tesuco.com.au

Website www.tesuco.com.au



Only trained operators may use this equipment.



Scan QR code to
view our complete
range of regulators.



Dual Stage High Purity Regulator

Industrial

PAGE 3 - 7

Welding Gases

PAGE 8 - 15

High Pressure

PAGE 16 - 17

Beverage

PAGE 18 - 22

Disposable

PAGE 23

Hydroponic

PAGE 24

Scientific

PAGE 25 - 28

Medical

PAGE 29 - 32

Accessories

PAGE 33 - 34



OXYGEN

The oxygen regulators have been manufactured and tested to AS 4267. As well as passing the oxygen shock test, they have also passed the other more severe oxygen ignition test. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.

Independently tested

- Oxygen shock test
- Oxygen promoted ignition test

SPECIFICATIONS	RC1BOX10	RC1SOX10	RC1SOX4.5
Flow rate <i>Note: flowrate @ 250 kPa outlet, 2,100 kPa inlet.</i>		80 m ³ /hr	
Inlet configuration	Bottom entry	Side entry	Side entry
Max. inlet pressure (p_1)		20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	1,000 kPa	450 kPa
Inlet connection		Type 10	
Outlet connection		5/8-18 UNF-RH Male	

i Meets AS 4267



ACETYLENE

Tesuco® acetylene regulators have been manufactured and tested to AS 4267. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.

SPECIFICATIONS	RC1BAC1.5	RC1SAC1.5
Flow rate <i>Note: flowrate @ 134 kPa outlet, 300 kPa inlet.</i>		28.5 m ³ /hr
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)		2,500 kPa
Max. outlet pressure (p_2)		150 kPa
Inlet connection		Type 20
Outlet connection		5/8-18 UNF-LH Male

i Meets AS 4267



Meets AS 4267

LPG

The rear entry LPG regulators are designed so that the cylinder shroud is adequately cleared by the regulator outlet, so that flashback arrestors and hoses can be easily connected. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.

RC1RLP4-3 is designed for air propane with high flowrates.

SPECIFICATIONS	RC1RLP4	RC1RLP4-3
Flow rate		28.5 m ³ /hr
Inlet configuration		Rear entry
Max. inlet pressure (p_1)		20,000 kPa
Max. outlet pressure (p_2)		400 kPa
Inlet connection		Type 21
Outlet connection	5/8-18 UNF-LH Male	3/8" BSP LH



MINI REGULATOR

The RCLPM4 model is designed with a "POL" type inlet connection. Made from solid brass it is compact in size to fit small cylinders. The outlet pressure is adjustable to 400 kPa with a maximum flow rate of 6 kg/h.

Designed for air propane equipment.

SPECIFICATIONS	RCLPM4
Max. inlet pressure (p_1)	1,000 kPa
Max. outlet pressure (p_2)	400 kPa
Flow rate	6 kg/h



RCB



RCBH

HELIUM BALLOON

A range of helium balloon regulators are available for the quick and simple inflation of balloons. The basic model connects directly to the cylinder and has the latest design tilt inflator on top. There is also a model that has a hand wheel for securing to the cylinder, a pressure gauge to show the cylinder contents and the latest design tilt inflator.

SPECIFICATIONS	RCB	RCBH
Max. inlet pressure (p_1)		20,000 kPa
Max. outlet pressure (p_2)		350 kPa
Inlet connection	Type 10	Type 10 handwheel
Outlet connection		Balloon nozzle

INERT GAS

Tesuco® offers an Inert gas regulator for applications where argon is required for pressure applications rather than flow. It is available for vertical or side exit cylinder valves. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.



SPECIFICATIONS

SPECIFICATIONS	RC1BIG10	RC1SIG10
Flow rate <i>Note: flowrate @ 250 kPa outlet, 2,100 kPa inlet.</i>	80 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	
Inlet connection	Type 10	
Outlet connection	5/8-18 UNF-RH Male	



Meets AS 4267

NITROGEN

The Tesuco® nitrogen regulators have been manufactured and tested to AS 4267. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.



SPECIFICATIONS

SPECIFICATIONS	RC1BNI10	RC1SNI10
Flow rate <i>Note: flowrate @ 250 kPa outlet, 2,100 kPa inlet.</i>	80 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	
Inlet connection	Type 50	
Outlet connection	5/8-18 UNF-RH Male	




Meets AS 4267

Industrial Two Stage

Two Stage regulators incorporate all components and features of a single stage regulator. In addition, however, they also contain a second pressure adjusting spring; diaphragm; and valve and seat assembly, known as the "1st Stage". The first stage is not user adjustable it is "pre-set" at the factory. The "2nd stage" then performs in a manner similar to that of a single-stage regulator, except that the inlet pressure to the second stage is relatively constant.


Because of the two-step pressure reduction, final delivery pressure of a two-stage regulator is constant and shows little effect from changes in cylinder pressure.

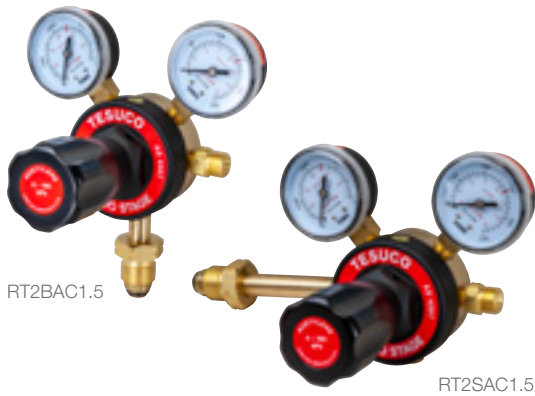

ACETYLENE Bottom & Side Entry

i Meets AS 4267

SPECIFICATIONS	RT2BAC1.5	RT2SAC1.5
Flow rate	8.5 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	2,500 kPa	
Max. outlet pressure (p_2)	150 kPa	
Inlet connection	Type 20	
Outlet connection	5/8-18 UNF-LH	

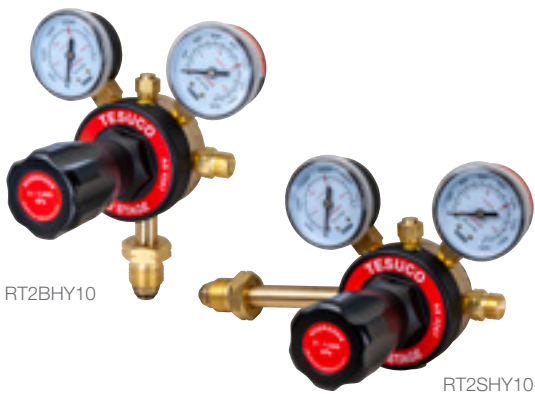

HYDROGEN Bottom & Side Entry

i Meets AS 4267

SPECIFICATIONS	RT2BHY10	RT2SHY10
Flow rate	140 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	
Inlet connection	Type 20	
Outlet connection	5/8-18 UNF-LH	

LPG Bottom & Side Entry

i Meets AS 4267

SPECIFICATIONS	RT2BLP40	RT2SLP4
Flow rate	13 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	2,500 kPa	
Max. outlet pressure (p_2)	400 kPa	
Inlet connection	Type 21	
Outlet connection	5/8-18 UNF-LH	



OXYGEN


Bottom & Side Entry

i Meets AS 4267

Independently tested

- Oxygen shock test

SPECIFICATIONS	RT2BOX10	RT2SOX10
Flow rate	35 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	
Inlet connection	Type 10	
Outlet connection	5/8-18 UNF-RH	

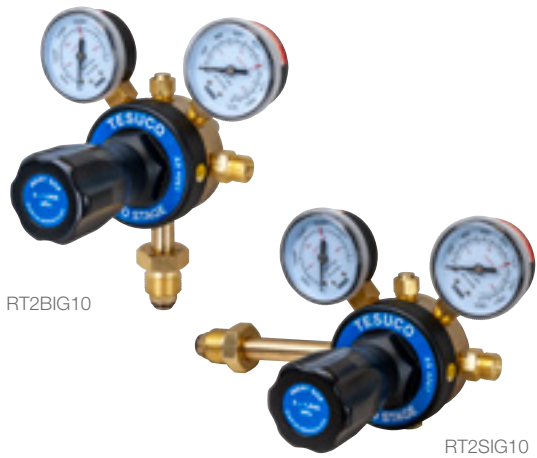

INERT GAS

Bottom & Side Entry

i Meets AS 4267

SPECIFICATIONS	RT2BIG10	RT2SIG10
Flow rate	31 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	
Inlet connection	Type 10	
Outlet connection	5/8-18 UNF-RH	



NITROGEN

Side Entry, Type 50

i Meets AS 4267

SPECIFICATIONS	RT2BNI10	RT2SNI10
Flow rate	31 m ³ /hr	
Inlet configuration	Bottom entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	1,000 kPa	
Inlet connection	Type 50	
Outlet connection	5/8-18 UNF-RH	

ARGON FOR ARGON & ARGON MIXTURES

The Tesuco® range of argon shielding gas regulators caters for both vertical and side cylinder valves. They are available in both flow gauge style and a set pressure with flowmeter combination. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.



FLOW GAUGE

Bottom Entry

SPECIFICATIONS

SPECIFICATIONS	RC1BARFG
Flowrate	0 - 35 L/min
Inlet configuration	Bottom entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267



FLOW GAUGE

Side Entry

SPECIFICATIONS

SPECIFICATIONS	RC1SARFG
Flowrate	0 - 35 L/min
Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267



SET PRESSURE

Bottom Entry


SPECIFICATIONS

RC1BARSP

Inlet configuration	Bottom entry
Max. inlet pressure (p_1)	20,000 kPa
Set pressure	300 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267

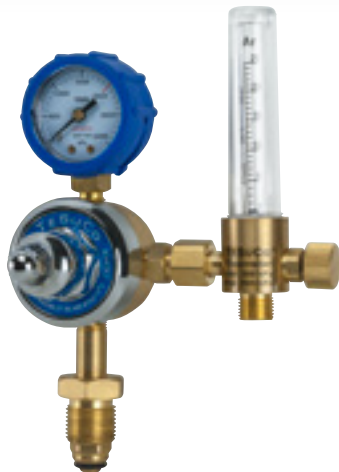

SET PRESSURE

Bottom Entry with Flowmeter

SPECIFICATIONS

RC1BARFM

Flowrate	0 - 25 L/min
Inlet configuration	Bottom entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267



SET PRESSURE

Bottom Entry with Two Flowmeters

SPECIFICATIONS

RC1BAR2FM

Flowrate	0 - 25 L/min
Inlet configuration	Bottom entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267



SET PRESSURE

Side Entry

SPECIFICATIONS

RC1SARSP

Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Set pressure	300 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267



SET PRESSURE

Side Entry with Flowmeter

SPECIFICATIONS

RC1SARFM

Flowrate	0 - 25 L/min
Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267



SET PRESSURE

Side Entry with Two Flowmeters

SPECIFICATIONS

RC1SAR2FM

Flowrate	0 - 25 L/min
Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



Meets AS 4267

CARBON DIOXIDE

The Tesuco® range of carbon dioxide shielding gas regulators caters for side exit cylinder valves. They are available in both flow gauge style and a set pressure with flowmeter combination. They are manufactured from machined brass, are easily adjustable and have easy to read pressure gauges. The regulator is colour coded and marked as required in the standard.



FLOW GAUGE

CO₂



Meets AS 4267

SPECIFICATIONS

RC1SCDFG

Flow rate	0 - 35 L/min
Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 30
Outlet connection	5/8-18 UNF-RH Male



SET PRESSURE

CO₂



Meets AS 4267

SPECIFICATIONS

RC1SCDSP

Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Set pressure	300 kPa
Inlet connection	Type 30
Outlet connection	5/8-18 UNF-RH Male



SET PRESSURE

CO₂ with Flowmeter



Meets AS 4267

SPECIFICATIONS

RC1SCDFM

Flow rate	0 - 25 L/min
Inlet configuration	Side entry
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 30
Outlet connection	5/8-18 UNF-RH Male

ARGON HEAT SINK

The heat sink style regulator is designed for argon shielding gas mixtures where high flows are required. The special design prevents freezing of the regulator without the use of a heater. It is pressure compensated to ensure accurate flow meter readings. The outlet is a standard 5/8-18 UNF-RH connection so a combination of flow meters and T pieces can be fitted.



SET PRESSURE

SPECIFICATIONS	RG1SARHS
Flow rate	100 L/min
Max. inlet pressure (p_1)	20,000 kPa
Inlet connection	Type 10
Outlet connection	5/8-18 UNF-RH Male



RG1SARHS25

SET PRESSURE

With Flowmeter

SPECIFICATIONS	RG1SARHS25	RG1SARHS40
Outlet configuration	1 x 25 L/min Flowmeter	1 x 40 L/min Flowmeter
Max. inlet pressure (p_1)	20,000 kPa	
Inlet connection	Type 10	
Outlet connection	5/8-18 UNF-RH Male	



RG1SARHS25T

SET PRESSURE

With Two Flowmeters

SPECIFICATIONS	RG1SARHS25T	RG1SARHS40T
Outlet configuration	2 x 25 L/min Flowmeters	2 x 40 L/min Flowmeters
Max. inlet pressure (p_1)	20,000 kPa	
Inlet connection	Type 10	
Outlet connection	5/8-18 UNF-RH Male	

CARBON DIOXIDE HEAT SINK

The heat sink style regulator is designed for carbon dioxide shielding gas mixtures where high flows are required. The special design prevents freezing of the regulator without the use of a heater. It is pressure compensated to ensure accurate flow meter readings. The outlet is a standard 5/8-18 UNF-RH connection so a combination of flow meters and T pieces can be fitted.



SET PRESSURE

SPECIFICATIONS	RG1SCDHS
Flowrate	100 L/min
Max. inlet pressure (p_1)	20,000 kPa
Outlet set pressure	300 kPa
Inlet connection	Type 30
Outlet connection	5/8-18 UNF-RH Male




RG1SCDHS25

SET PRESSURE

With Flowmeter

SPECIFICATIONS	RG1SCDHS25	RG1SCDHS40
Outlet configuration	1 x 25 L/min Flowmeter	1 x 40 L/min Flowmeter
Max. inlet pressure (p_1)	20,000 kPa	
Outlet set pressure	300 kPa	
Inlet connection	Type 30	
Outlet connection	5/8-18 UNF-RH Male	

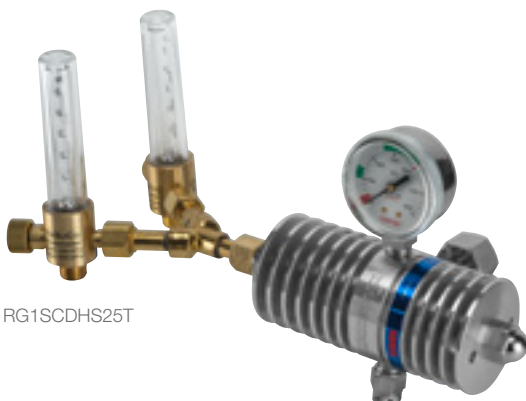

RG1SCDHS25T

SET PRESSURE

With Two Flowmeters

SPECIFICATIONS	RG1SCDHS25T	RG1SCDHS40T
Outlet configuration	2 x 25 L/min Flowmeters	2 x 40 L/min Flowmeters
Max. inlet pressure (p_1)	20,000 kPa	
Outlet set pressure	300 kPa	
Inlet connection	Type 30	
Outlet connection	5/8-18 UNF-RH Male	




RCFL40

FLOWMETERS

Flowmeters are used for precise flow control of the shielding gas to the MIG gun nozzle in welding applications. Tesuco® has two in the range. One is 0-25 L/min for TIG and smaller flow MIG applications and the other is a 0-40 L/min for the larger flow MIG applications.

SPECIFICATIONS	RCFL25	RCFL40
Max. working pressure	800 kPa	
Inlet connection	5/8-18 UNF-RH Female	
Outlet connection	5/8-18 UNF-RH Male	

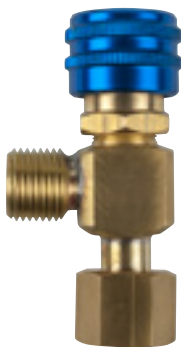

RAFR08

FLOW RESTRICTORS

In some applications for shielding gas where the work is repetitious and the shielding gas flow does not need to change, flow restrictors can be the best option. These are units that attach to the outlet of the set pressure regulator and have a pre-set flow rate. They have a quarter turn on/off knob and have no flow adjustment. Tesuco® can supply these in three different flow settings.

SPECIFICATIONS	RAFR08	RAFR15	RAFR20
Flowrate	8 L/min	15 L/min	20 L/min
Gas Service	Argon/Carbon Dioxide		
Inlet Connection	5/8-18 UNF-RH		



FLOW TESTER


In all MIG and TIG welding applications it is important to establish the exact flow rate of the shielding gas for the welding operation being performed. This is best done at the welding gun nozzle itself. The Tesuco® flow tester is a small economical unit that can be fitted at the end of the nozzle in a vertical position, with the wire feeder off the trigger on the gas can be activated and the actual gas flow observed.

SPECIFICATIONS	RCFT40T
Flowrate	0 - 40 L/min


SINGLE STAGE

RC Series

Oxygen / Inert / Permanent Gases

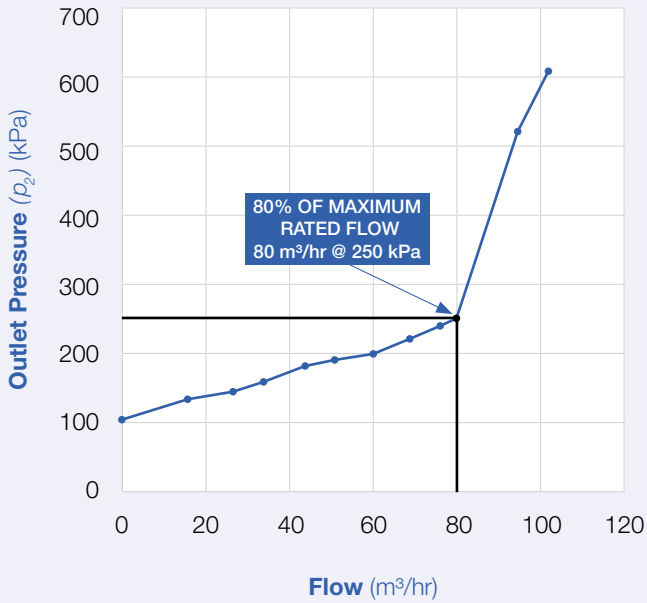


Acetylene

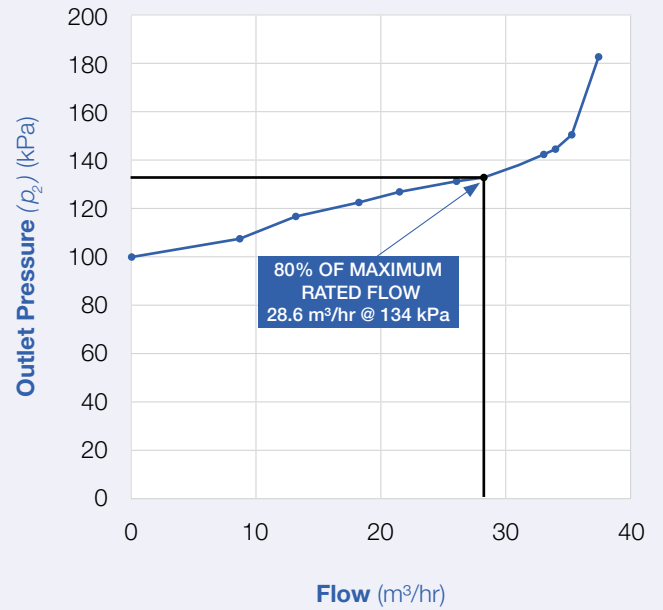


TWO STAGE

RT Series

Oxygen / Inert / Permanent Gases

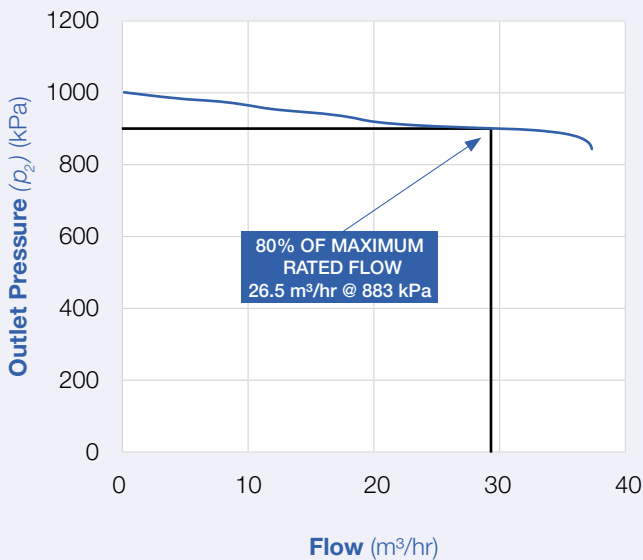

Acetylene

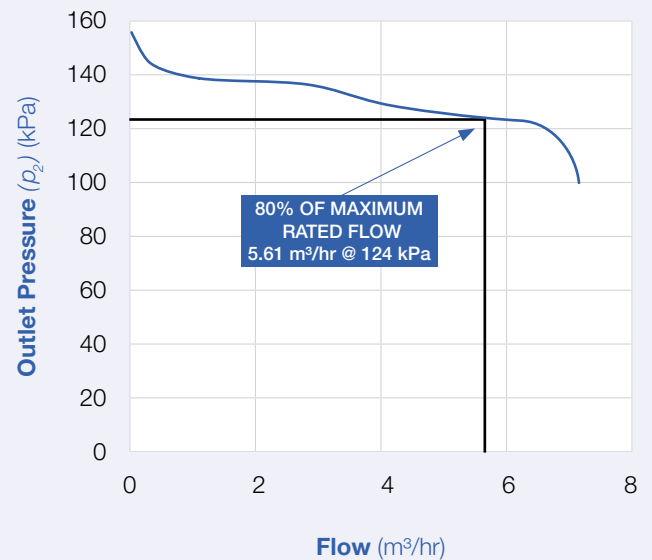

High Pressure Single Stage



RI1SNI60C



Meets AS 4267



PISTON STYLE

This professional piston style regulator has a rugged brass construction with large easy to read dual scale kPa/psi) pressure gauges with gauge protectors fitted. The regulator is colour coded and engraved or labelled with all the requirements of the standard AS 4267. This regulator has been designed specifically for the air conditioning and refrigeration industries.

SPECIFICATIONS

	RI1SAI60C	RI1SNI60C
Flow rate <i>Note: flowrate @ 6,000 kPa outlet, 20,000 kPa inlet.</i>	150 m ³ /hr	
Inlet configuration	Side entry	
Gas service	Air	Nitrogen
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	6,000 kPa	
Inlet connection	Type 60	Type 50

NITROGEN 6,000 kPa REGULATOR & TEST GAUGE KIT

Part No: RI1SNI60CTG

The same professional regulator, with the hand wheel tightening feature supplied as a kit with the refrigeration test gauge, all in a sturdy IP55 rated plastic storage case with a foam insert to keep the regulator and test gauge safe from damage.



Meets AS 4267



RG1S300

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.

Eg. Oxygen 5,000 kPa outlet, part number: RG1SOX50

SPECIFICATIONS

	RG1S50	RG1S100	RG1S200	RG1S300
Flow rate <i>Note: flowrate @ 5,000 kPa outlet, 20,000 kPa inlet</i>	135 m ³ /hr	340 m ³ /hr <i>Note: flowrate @ 10,000 kPa outlet, 20,000 kPa inlet</i>	360 m ³ /hr <i>Note: flowrate @ 10,000 kPa outlet, 20,000 kPa inlet</i>	360 m ³ /hr <i>Note: flowrate @ 10,000 kPa outlet, 20,000 kPa inlet</i>
Inlet configuration	Side entry	Side entry	Side entry	Side entry
Max. inlet pressure (p_1)	20,000 kPa	30,000 kPa	30,000 kPa	40,000 kPa
Max. outlet pressure (p_2)	5,000 kPa	10,000 kPa	20,000 kPa	30,000 kPa
Inlet connection	1/4" NPT FM	1/4" NPT FM	1/4" NPT FM	1/4" NPT FM
Outlet connection	1/4" NPT FM	1/4" NPT FM	1/4" NPT FM	1/4" NPT FM



HEATER REGULATOR

- Regulator is preset at 20,000 kPa
- Thermostatically-controlled built-in electric heater keeps the CO₂ warm and provides continuous duty cycle without freezing
- 2 1/2" gauges for easy reading
- Forged brass body and housing cap
- Sintered bronze inlet filter

SPECIFICATIONS

RG1SHR

Flow rate <i>Note: flowrate @ 15°C</i>	50 m ³ /hr
Max. inlet pressure (p_1)	20,000 kPa
Max. outlet pressure (p_2)	1,300 kPa
Inlet connection	Type 30
Outlet connection	G 1/2" RH Male
Heater	1200 W / 220 V
Weight	4.4 kg



4,000 kPa Dual Stage

This side entry dual stage regulator has a two stage piston design for high inlet, high outlet pressure and provides a high gas flow. It is designed to deliver this high outlet pressure in an extremely stable way, making it ideal for laser applications. The body and first stage is made completely from fully machined brass bar stock and is extremely rugged and reliable.

RG2SAI40

SPECIFICATIONS	RG2SAI40	RG2SCD40	RG2SIG40	RG2SNI40	RG2SNI4051
Flow rate <i>Note: flowrate @ 3,500 kPa outlet, 20,000 kPa inlet.</i>	100 m ³ /hr	100 m ³ /hr	100 m ³ /hr	100 m ³ /hr	100 m ³ /hr
Gas service	Air	Carbon Dioxide	Inert Gas	Nitrogen	Nitrogen
Max. inlet pressure (p_1)	30,000 kPa	30,000 kPa	30,000 kPa	30,000 kPa	30,000 kPa
Max. outlet pressure (p_2)	4,000 kPa	4,000 kPa	4,000 kPa	4,000 kPa	4,000 kPa
Inlet connection	Type 60	Type 30	Type 10	Type 50	Type 51



Meets AS 4267

SINGLE STAGE

Cylinder Mount

SPECIFICATIONS

RC1SCD04R

Max. working pressure	20,000 kPa		
Delivery pressure	0 - 400 kPa		
Inlet	Type 30 stem and nut		
Outlet	5/8-18 UNF RH with nut and 5 mm hose barb		
Relief valve	High volume set at 440 kPa		
Flow rate	kPa	m³/hr	L/min
Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO ₂ x 0.808.	100	4.4	73
	350	15.88	265



RI1RCD04



Meets AS 4267

SINGLE STAGE

Cylinder Mount

SPECIFICATIONS

RI1RCD03

RI1RCD04

RI1RNI04

Gas service	CO ₂	CO ₂	Nitrogen
Inlet configuration	Rear entry		
Max. working pressure	20,000 kPa		
Delivery pressure	0 - 400 kPa		
Inlet connection	Type 30 stem & handwheel		
Outlet connection	Ball valve, non-return valve & 6-12 mm hose barb		
Relief valve	High volume set at 440 kPa (vent connection)		
Flow rate	kPa	m³/hr	L/min
Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO ₂ x 0.808.	100	2.5	42
	350	7.5	125



RG2SCD4HS

TWO STAGE

Cylinder Mount

SPECIFICATIONS

	RG2SCD4HS	RG2SNI4HS	
Gas service	Carbon Dioxide	Nitrogen	
Inlet configuration	Side entry		
Max. working pressure	20,000 kPa		
Delivery pressure	0 - 400 kPa		
Inlet connection	Type 30 stem & handwheel	Type 50 stem & handwheel	
Outlet connection	5/8-18 UNF-RH with nut & 6 & 8 mm hose barbs		
Relief valve	High volume set at 440 kPa		
Flow rate	kPa	m³/hr	L/min
	100 350	6 19.5	100 325

Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO₂ x 0.808.



Meets AS 4267


TWO STAGE

Wall Mount

SPECIFICATIONS

	RGC2SCD4HSP	RGC2SNI4HSP	
Gas service	Carbon Dioxide	Nitrogen	
Max. working pressure	20,000 kPa		
Delivery pressure	0 - 400 kPa		
Inlet connection	Type 30 stem & handwheel	Type 50 stem & handwheel	
Outlet connection	5/8-18 UNF-RH with nut & 6 & 8 mm hose barbs		
Relief valve	High volume set at 440 kPa		
Flow rate	kPa	m³/hr	L/min
	100 350	6 19.5	100 325

Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO₂ x 0.808.

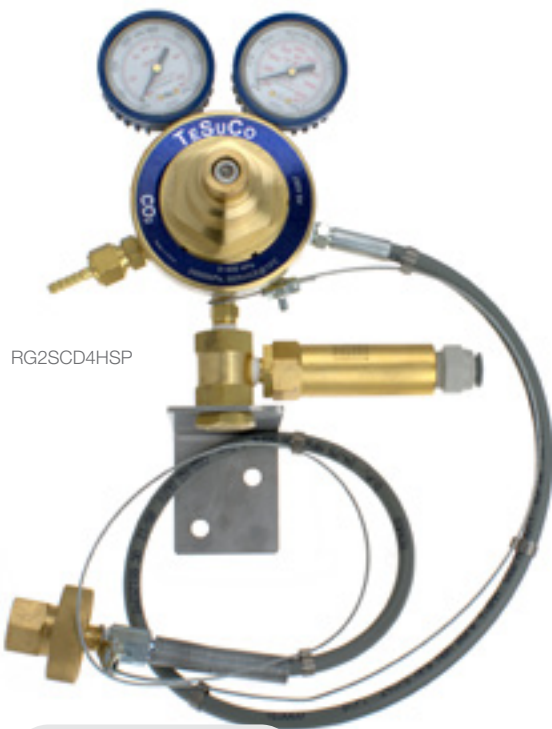

RG2SCD4HSP



Meets AS 4267



RI1S8



Meets AS 4267

SINGLE POST MIX OR BEER

SPECIFICATIONS	RI1S8	RI1S3	RI1SN18
Gas service	Carbon Dioxide		Nitrogen
Inlet configuration	Side entry		
Max. working pressure	20,000 kPa		
Delivery pressure	0 - 800 kPa	0 - 300 kPa	0 - 800 kPa
Inlet connection	Type 30 stem & handwheel / Type 50		
Outlet connection	6 - 12 mm Hose barb		
Relief valve	880 kPa	330 kPa	880 kPa
Flow rate <small>Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO₂ x 0.808.</small>	kPa	m³/hr	L/min
	100 350	2.5 7.5	42 125



RI1T8



Meets AS 4267

TWIN POST MIX OR POST MIX/BEER COMBINATION

SPECIFICATIONS	RI1T3	RI1T8	RI1S8S3
Gas service	Carbon Dioxide		
Inlet configuration	Side entry		
Max. working pressure	20,000 kPa		
Delivery pressure	300 kPa	800 kPa	800/300 kPa
Inlet connection	Type 30 stem & handwheel		
Outlet connection	6 - 12 mm Hose barb		
Relief valve	330 kPa	880 kPa	880 & 330 kPa
Flow rate <small>Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO₂ x 0.808.</small>	kPa	m³/hr	L/min
	100 350	2.5 7.5	42 125

Note: Also available as panel mount



TRIPLE POST MIX/BEER COMBINATIONS

This regulator provides various combination possibilities for beer and post mix applications off the one unit.

Eg. RI1T8S3 for two post mix and one beer.

SPECIFICATIONS

SPECIFICATIONS		VARIOUS PART NUMBERS		
Max. working pressure		20,000 kPa		
Delivery pressure		0 - 800 kPa		
Post mix		0 - 300 kPa		
Beer				
Inlet connection		Type 30 stem & handwheel		
Outlet connection		6 - 12 mm Hose barb		
Relief valve		Set at 880 kPa		
Post mix		Set at 330 kPa		
Beer				
Flow rate		kPa	m³/hr	L/min
Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO ₂ x 0.808.				
		100	2.5	42
		350	7.5	125



Meets AS 4267

Note: Also available as panel mount



WINE DISPENSE

Two Stage

SPECIFICATIONS

SPECIFICATIONS		RIM2NI05		
Gas service		Nitrogen		
Inlet configuration		Bottom entry		
Max. working pressure		20,000 kPa		
Delivery pressure		0 - 30 kPa		
Inlet connection		M10 x 1 with Type 50 stem & nut supplied		
Outlet connection		5/16" push fit		
Relief valve		Set at 880 kPa & 40 kPa		
Flow rate		kPa	m³/hr	L/min
Indicative only and based on flow recorded in air through the non-return valve at the outlet. For CO ₂ x 0.808.				
		30	1	16.7



Meets AS 4267

Beverage

For Disposable Gas Cylinders



WINE DISPENSE

Two Stage

SPECIFICATIONS

RIM2NIM10V4

Gas service	Nitrogen
Inlet configuration	Rear entry
Max. working pressure	20,000 kPa
Delivery pressure	0 - 30 kPa
Inlet connection	M10 x 1
Outlet connection	5/16" push fit
Relief valve	Set at 880 kPa & 40 kPa



SINGLE STAGE

Two Gauge

SPECIFICATIONS

RIMCD4M10

Gas service	Carbon Dioxide
Max. working pressure	13,000 kPa
Delivery pressure	0 - 400 kPa
Inlet connection	M10 x 1
Outlet connection	5/16" push fit
Relief valve	Set at 440 kPa



SINGLE STAGE

One Gauge

SPECIFICATIONS

RIMCD4P

RIMCD6

Gas service	Carbon Dioxide	Carbon Dioxide
Max. working pressure	13,000 kPa	13,000 kPa
Delivery pressure	0 - 400 kPa	0 - 600 kPa
Inlet connection	M10 x 1	M10 x 1
Outlet connection	1/4" push fit	1/4" push fit
Relief valve	Set at 440 kPa	Set at 660 kPa



MICRO REGULATOR

SPECIFICATIONS	OTMRIGP5
Gas service	Inert Gas
Max. working pressure	13,000 kPa
Delivery pressure	0 - 10 L/min
Inlet connection	M10 x 1
Outlet connection	5/8-18 UNF-RH Male



NITROGEN REGULATOR

FEATURES

- Outlet pressure gauge
- Cylinder contents gauge
- Adjustable pressure
- Suitable for nitrogen and leakxpose® disposable cylinders

SPECIFICATIONS	RG1MNI15
Maximum inlet pressure (p_1)	15,000 kPa
Maximum outlet pressure (p_2)	1,500 kPa
Inlet type	M10 x 1
Outlet type	1/4" SAE flare
Pressure gauge	2
Pressure	0 - 1,500 kPa



NITROGEN REGULATOR

A small, very high outlet pressure regulator designed for use with disposable cylinders containing nitrogen or nitrogen / hydrogen mixtures (LeakXpose®). It is used for the convenient, high pressure testing of air conditioning and refrigeration systems. Used with LeakXpose®, it can be used for leak detection in domestic, commercial and automotive air conditioning systems, or refrigeration systems. Combined with disposable gas cylinders it is especially suited to on site testing and leak detection.

SPECIFICATIONS	R11SNI60M10
Flow rate	50 m ³ /hr
Inlet configuration	Side
Maximum inlet pressure (p_1)	14,500 kPa
Maximum outlet pressure (p_2)	6,000 kPa
Inlet connection	M10 x 1
Outlet connection	1/4 SAE Flare RH

Carbon dioxide delivery systems are designed for Hydroponic installations, where the introduction of regular amounts of CO₂ gas enhance the plants growth. The systems comprise of a regulator, a solenoid valve (with 240 volt connection). Simply plug into a timer set for your delivery intervals, set the L/min of gas required and every time the timer activates a measured supply of gas is delivered into the enclosure.

MICRO HYDROPONIC REGULATOR

For disposable CO₂ cylinders



SPECIFICATIONS

OTMRIGP5SV

Gas service	CO ₂
Max. working pressure ($p1$)	13,000 kPa
Delivery pressure	0 - 10 L/min
Inlet connection	M 10 x 1
Outlet connection	5/8-18 UNF-RH Male
Solenoid valve	230 V / 50 Hz
Timer	Not included

HYDROPONIC REGULATORS

For type 30 re-fillable CO₂ cylinders

RC1SCDFGSV



RC1SCDFMSV



SPECIFICATIONS

RC1SCDFGSV

RC1SCDFMSV

Gas service	CO ₂	CO ₂
Max. working pressure ($p1$)	20,000 kPa	20,000 kPa
Delivery pressure	0 - 35 L/min	0 - 25 L/min
Inlet connection	Type 30	Type 30
Outlet connection	5/8-18 UNF-RH Male	5/8-18 UNF-RH Male
Solenoid valve	230 V / 50 Hz	230 V / 50 Hz
Timer	Not included	Not included



GR1CAN

SPECIFICATIONS	GR1CAN	GR1SAN
Flow rate	20 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	20,000 kPa	
Max. outlet pressure (p_2)	170 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



GR1CBO

SPECIFICATIONS	GR1CBO	GR1SBO
Flow rate	70 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	680 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



GR1CBP

SPECIFICATIONS	GR1CBP	GR1SBP
Flow rate	100 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	1,700 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



GR1CBR

SPECIFICATIONS	GR1CBR	GR1SBR
Flow rate	100 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	3,440 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



SPECIFICATIONS	GR1SCQ
Flow rate	80 m ³ /hr
Purity	6.0 (99.9999%)
Max. inlet pressure (p_1)	40,000 kPa
Max. outlet pressure (p_2)	20,000 kPa
Materials	
Body	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



GPSB

EXAMPLE

PROTOCOL STATIONS

The protocol station is a small high pressure distribution block that allows the regulator to be mounted on a wall or bench and is suitable for both single and dual-stage regulators. The protocol station is an inexpensive, versatile piece of equipment which improves safety, convenience, organisation and is available in chrome plated brass or stainless steel.

SPECIFICATIONS	GPSB	GPSS
Connection		
Inlet	1/4" NPT Female	
Outlet	1/4" NPT Female	
Purity	6.0 (99.9999%)	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application, including purge valve.



GR2CBN

SPECIFICATIONS	GR2CBN	GR2SBN
Flow rate	10 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	170 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



GR2CBO

SPECIFICATIONS	GR2CBO	GR2SBO
Flow rate	20 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	680 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



GR2CBP

SPECIFICATIONS	GR2CBP	GR2SBP
Flow rate	25 m ³ /hr	
Purity	6.0 (99.9999%)	
Max. inlet pressure (p_1)	30,000 kPa	
Max. outlet pressure (p_2)	1,700 kPa	
Materials		
Body	Chrome plated brass	Stainless steel

Regulators can be fitted with various inlets to suit gas type various outlets available to suit application.



BENCH MOUNT

Bench mount regulators are designed for central gas systems where control is needed at the application point. The units are bottom entry with a column for mounting flush to a bench surface. They feature an isolation valve, adjustable pressure and easy to read 50 mm pressure gauges.

SPECIFICATIONS	GOLBC3410
Flow rate	95 L/min
Gas service	Non-corrosive gases
Inlet connection	1/4" NPT Male
Outlet connection	1/4" NPT Female
Delivery pressure	Max. 1,000 kPa
Purity	6.0 (99.9999%)
Country of origin	China



SURFACE MOUNTED

Surface mount regulators are designed for central gas systems where control is needed at the application point. The units have a wall mounting block with a side entry to allow for pipework that is mounted flush to the wall surface. They feature an isolation valve, adjustable pressure and easy to read 50 mm pressure gauges.


SPECIFICATIONS	GOLSC3410
Flow rate	95 L/min
Max. inlet pressure (p_1)	3,400 kPa
Max. outlet pressure (p_2)	1,000 kPa



WALL MOUNTED

Wall mount regulators are designed for central gas systems where control is needed at the application point. The units are rear entry for mounting flush to the wall surface where pipework is mounted within the wall or fed through the wall. They feature an isolation valve, adjustable pressure and easy to read 50 mm pressure gauges.

SPECIFICATIONS	GOLWC3410
Flow rate	95 L/min
Max. inlet pressure (p_1)	3,400 kPa
Max. outlet pressure (p_2)	1,000 kPa

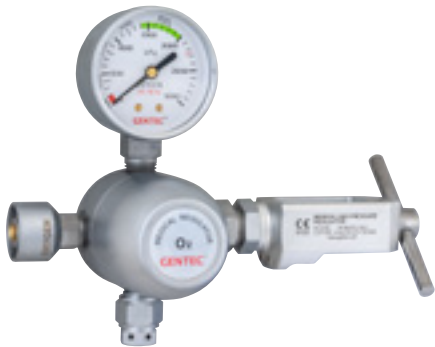


197M-870-YSC



197M-950-YSC



197M-910-YSC

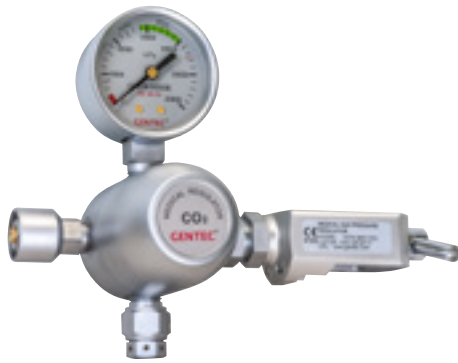

197M-940-YSC



197M-965-YSC

STANDARD

The 197M regulators are fabricated of high-quality brass and have a Matte Chrome body. Key features include, adjustable yoke system, easy to read pressure gauge made to AS 4706, Self-Sealing outlet makes sure no gas will flow until the flowmeter is connected. Pin index yoke 'T' screw includes a clip to prevent it from being removed completely. Regulator comes with a manual and a one year warranty against manufacturers defect. The 197M Regulators are listed on the Australian Register of Therapeutic Goods (ARTG).

SPECIFICATIONS	197M-870-YSC	197M-950-YSC	197M-910-YSC	197M-940-YSC	197M-965-YSC
Gas service	Medical oxygen	Medical air	Nitrous oxide	Carbon dioxide	50/50 Oxy/nitrous oxide
Set pressure	400 kPa	400 kPa	400 kPa	400 kPa	400 kPa
Q1 Valve	130 L/min	130 L/min	130 L/min	130 L/min	130 L/min
Max. flow	300 L/min	300 L/min	300 L/min	300 L/min	300 L/min



Meets AS 3840.1



286MB-15LYA

VARIABLE CLICK STYLE THERAPY REGULATORS

These click flow regulators are manufactured with a chrome plated brass body, with brass chamber. These Regulators are listed on the Australian Register of Therapeutic Goods, comply with all relevant Australian Standards*, and have passed the oxygen flammability test.

**Note: Flow tolerances required by AS 3840 are such that at 1/32 and 1/16 Lpm the tolerances are lower than the repeatability achievable between different test equipment or operators.*

SPECIFICATIONS	286MB-4LYA	286MB-8LYA	286MB-15LYA	286MB-25LYA
Gas service	Medical oxygen	Medical oxygen	Medical oxygen	Medical oxygen
Max. inlet pressure (p_1)	3000 psi	3000 psi	3000 psi	3000 psi
Set pressure	400 kPa	400 kPa	400 kPa	400 kPa
Flowrate	4 L/min	8 L/min	15 L/min	25 L/min
Flow selection settings	0, 1/32, 1/16, 1/8, 1/4, 0.50, 0.75, 1, 1.5, 2, 3, 4 L/min	0, 0.5, 1, 1.5, 2, 2.5, 3, 4, 5, 6, 7, 8 L/min	0, 0.5, 1, 2, 3, 4, 5, 6, 7, 8, 10, 15 L/min	0, 0.5, 1, 2, 3, 4, 5, 6, 8, 10, 15, 25 L/min
Outlet	1 x hosebarb (flow controlled)	1 x hosebarb (flow controlled)	1 x hosebarb (flow controlled)	1 x hosebarb (flow controlled)



Meets AS 3840.1



SPECIFICATIONS

286MB-25LY2A

Gas service	Medical oxygen
Max. inlet pressure (p_1)	3000 psi
Set pressure	400 kPa
Flowrate	8 L/min
Flow selection settings	0, 0.5, 1, 2, 3, 4, 5, 6, 8, 10, 15, 25 L/min
Outlet	1 x hosebarb (flow controlled) 2 SIS outlets (full flow)



SPECIFICATIONS

FM197BS-15L-SISR

Gas service	Medical oxygen
Full scale	15 L/min
Max. flowrate	Restricted to 16 - 18 L/min
Outlet fitting	1/4" BSP male
Calibration pressure	400 kPa
Safety relief valve	Built in
Hose barb	Supplied
User manual	Supplied
Warranty	5 Years (manufacturers defect)



Meets Australian Standards



FM187BS-15L-SISR

SPECIFICATIONS

FM187BS-15L-SISR

FM187BS-15L-SISR

Gas service		Medical air
Full scale	Unrestricted	Restricted to 16 - 18 L/min
Max. flowrate		15 L/min
Outlet fitting		1/4" BSP male
Calibration pressure		400 kPa
Safety relief valve		Built in
Hose barb		Supplied
User manual		Supplied
Warranty		5 Years (manufacturers defect)



Meets Australian Standards



CLICK STYLE FLOWMETER

The CFM Series Flowmeters are a compact click adjustable flowmeter with an aluminium casing. The outlet is 1/4" BSP with a standard hose nipple with gas specific colouring. The units are TGA Listed.

SPECIFICATIONS

CFM-15L-SIS

Gas service	Medical oxygen
Calibration	50 psi
Outlet fitting	1/4" BSP male
Flow rate settings	0, 0.5, 1, 2, 3, 4, 5, 6, 7, 8, 10 & 15 L/min



OXYGEN SUPPLY MANIFOLD

The DST Oxygen Supply Manifold is designed for EMS and mass casualty situations where multiple patients require oxygen simultaneously. The unit can be connected to wall outlets, or cylinders for portability and provide consistent pressure with individually selectable flow rates. The unit is available in 5, 7 or 9 flowmeter models. The supply hose provided is 3m but can be varied to customer requirements.

The units are manufactured according to CE requirements and are compliant to EN 13220.

PART NO

DST-7-15L



FM293-1L-X-SIS

SPECIFICATIONS	FM293-1L-X-SIS	FM293-200-X-SIS	FM293-3L-X-SIS	FM293-75L-X-SIS	FM293-75L-Q-SIS
Gas service	Medical oxygen	Medical oxygen	Medical oxygen	Medical oxygen	Medical air
Full scale	1 Lpm	200 cc/min	3 Lpm	75 Lpm	75 Lpm
Max. flowrate	5 - 10 Lpm	500 cc/min	20 - 50 Lpm	70 - 100 Lpm	70 - 100 Lpm
Calibration pressure	400 kPa	400 kPa	400 kPa	400 kPa	400 kPa
Inlet connection	Sleeve Index System (SIS) as per AS 2902 — 2005				
Outlet connection	G1/4"	G1/4"	G1/4"	G1/4"	G1/4"
Hose barb	Supplied				
User manual	Supplied				
Warranty	5 Year limited warranty				



G-AD90LH58

G-AD90RH58

REGULATOR OUTLET ADAPTOR

There are applications that require a 90 degree adaptor on the outlet of the regulator. These ones are small and made from solid brass for left hand and right hand threads.

SPECIFICATIONS	G-AD90LH58	G-AD90RH58
Inlet connection	5/8-18 UNF-RH Female	
Outlet connection	5/8-18 UNF-RH Male	



W-PLUG58LH

W-PLUG58RH

BLANKING PLUGS

When not in use, it is good practice to have blanking plugs on the outlets of regulators and regulated outlet points. This stops the ingress of dirt and insects and stops gas leaks if they are accidentally turned on. They also protect the thread from damage during transport.

PART NO
W-PLUG58LH
W-PLUG58RH



SPRGPB

SPRGPBL

SPRGPR

GAUGE PROTECTOR

Gauge protectors are available to fit to the 50 mm diameter pressure gauges. They help protect the pressure gauge from minor knocks and impacts when in use and being transported.

SPECIFICATIONS	SPRGPB	SPRGPBL	SPRGPR
Colour	Black	Blue	Red



GAUGE PROTECTOR

To suit RI1SNI60 Regulator

SPECIFICATIONS	SPRGP63BL
Size	63 mm
Colour	Blue



GAS PRE-HEATERS

The heaters are suitable for pressures up to 200 bar (20,000 kPa). The media flowing through the system are evenly warmed through an automatic temperature control, so that an uninterrupted flow - even when in constant use - is provided. There are two mounting options available. One has type 30 connections and can be mounted between the cylinder and the regulator, or on a wall mounted manifold arrangement, between the manifold and regulator. Gas warmers should be situated under cover as the units are weather proof but not waterproof. It is recommended that the power is disconnected when the system is out of use for long periods as the gas heater can overheat the gas. When the system is not being used the cylinder valve should be shut and the gas pressure released from the system.

SPECIFICATIONS

GH19030

Inlet connection	Type 30 stem and nut
Outlet connection	Type 30 Male



SPRO10B



SPRO50



SPRO30R

O-RINGS

Sold in packs of 10

SPECIFICATIONS

SPRO10B

SPRO50

SPRO30R

Regulator range	RC for Type 10, 20, 21	RC for Type 50, 60	RI for Type 30
-----------------	------------------------	--------------------	----------------

MEDICAL ACCESSORIES

KEY WRENCH

For medical cylinder



PART NO

G123029007

BODOK SEALS

Gentec Bodok Seals are a specialised washer that allow for a gas tight seal between the regulators yoke and a gas cylinder.



SPECIFICATIONS

G204662010

Colour	Blue
--------	------



HOSE BARBS

Tesuco® hose barbs are designed to compliment their flowmeter counterparts. White hose barbs are suitable for oxygen flowmeters, while our black hose barbs are for air flowmeters.

SPECIFICATIONS

G204302400

G204302404

Gas service	Medical oxygen	Medical air
Colour	White	Black

Registered Trademarks

Tesuco®

Bevline®

Leakxpose®

Flame///Pro®

Flame Pro™

FLAME  **PRO**

 TESUCO TECHNICAL SUPPLIES COMPANY	HOSPITALITY
	GAS SAFETY
	INDUSTRIAL
	SCIENTIFIC
	MEDICAL

PHONE **+61 2 9737 9937**
EMAIL **sales@tesuco.com.au**
WEB **www.tesuco.com.au**

The information in this brochure is to be used as a guide only.
The ultimate responsibility for safe use of the equipment lies with the operator. In the interest of constant improvement in quality and design, product specifications may change at any time, without notice. E&OE

DISTRIBUTED BY

